


3 IBT Pressure -Torque Conversion Chart

Pressure	Torque Value
Bar	Nm
70	451
80	515
90	580
100	644
110	709
120	773
130	838
140	902
150	967
160	1031
170	1096
180	1160
190	1225
200	1289
210	1353
220	1418
230	1482
240	1547
250	1611
260	1676
270	1740
280	1805
290	1869
300	1934
310	1998
320	2063
330	2127
340	2191
350	2256
360	2320
370	2385
380	2449

Pressure	Torque Value
Bar	Nm
390	2514
400	2578
410	2643
420	2707
430	2772
440	2836
450	2900
460	2965
470	3029
480	3094
490	3158
500	3223
510	3287
520	3352
530	3416
540	3481
550	3545
560	3610
570	3674
580	3738
590	3803
600	3867
610	3932
620	3996
630	4061
640	4125
650	4190
660	4254
670	4319
680	4383
690	4448
700	4512

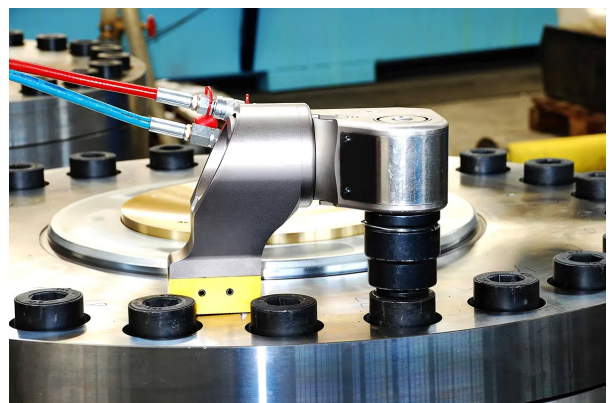

The data in the pressure torque table are the IBT series factory calibration values. They can be used as a calibration certificate.