
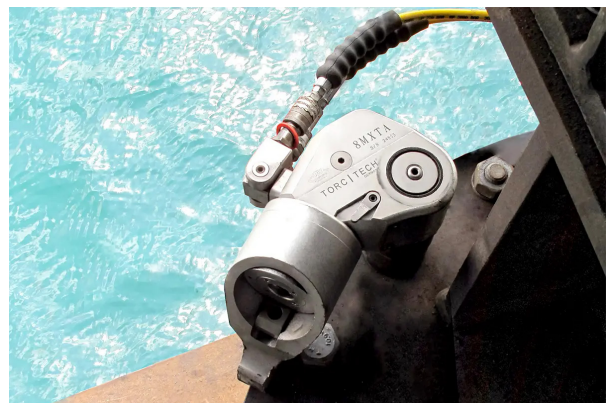


8 IBT Pressure -Torque Conversion Chart

Pressure	Torque Value
Bar	Nm
70	1078
80	1232
90	1386
100	1540
110	1694
120	1848
130	2002
140	2156
150	2310
160	2464
170	2618
180	2772
190	2926
200	3080
210	3234
220	3388
230	3542
240	3696
250	3850
260	4004
270	4158
280	4312
290	4466
300	4620
310	4774
320	4928
330	5082
340	5236
350	5390
360	5544
370	5698
380	5852

Pressure	Torque Value
Bar	Nm
390	6006
400	6160
410	6314
420	6468
430	6622
440	6776
450	6930
460	7084
470	7238
480	7392
490	7546
500	7700
510	7854
520	8008
530	8162
540	8316
550	8470
560	8624
570	8778
580	8932
590	9086
600	9240
610	9394
620	9548
630	9702
640	9856
650	10010
660	10164
670	10318
680	10472
690	10626
700	10780

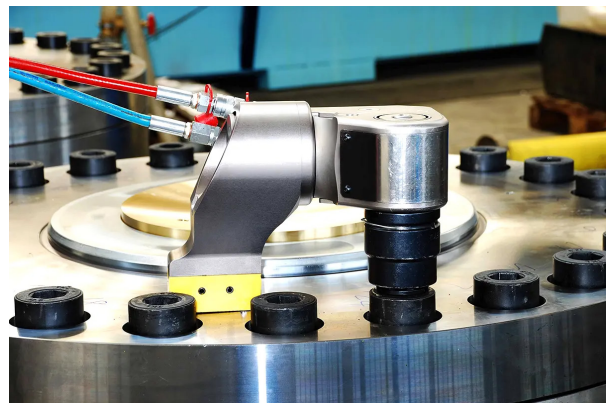

The data in the pressure torque table are the IBT series factory calibration values. They can be used as a calibration certificate.