


30 LOW Power Head Spare Parts List

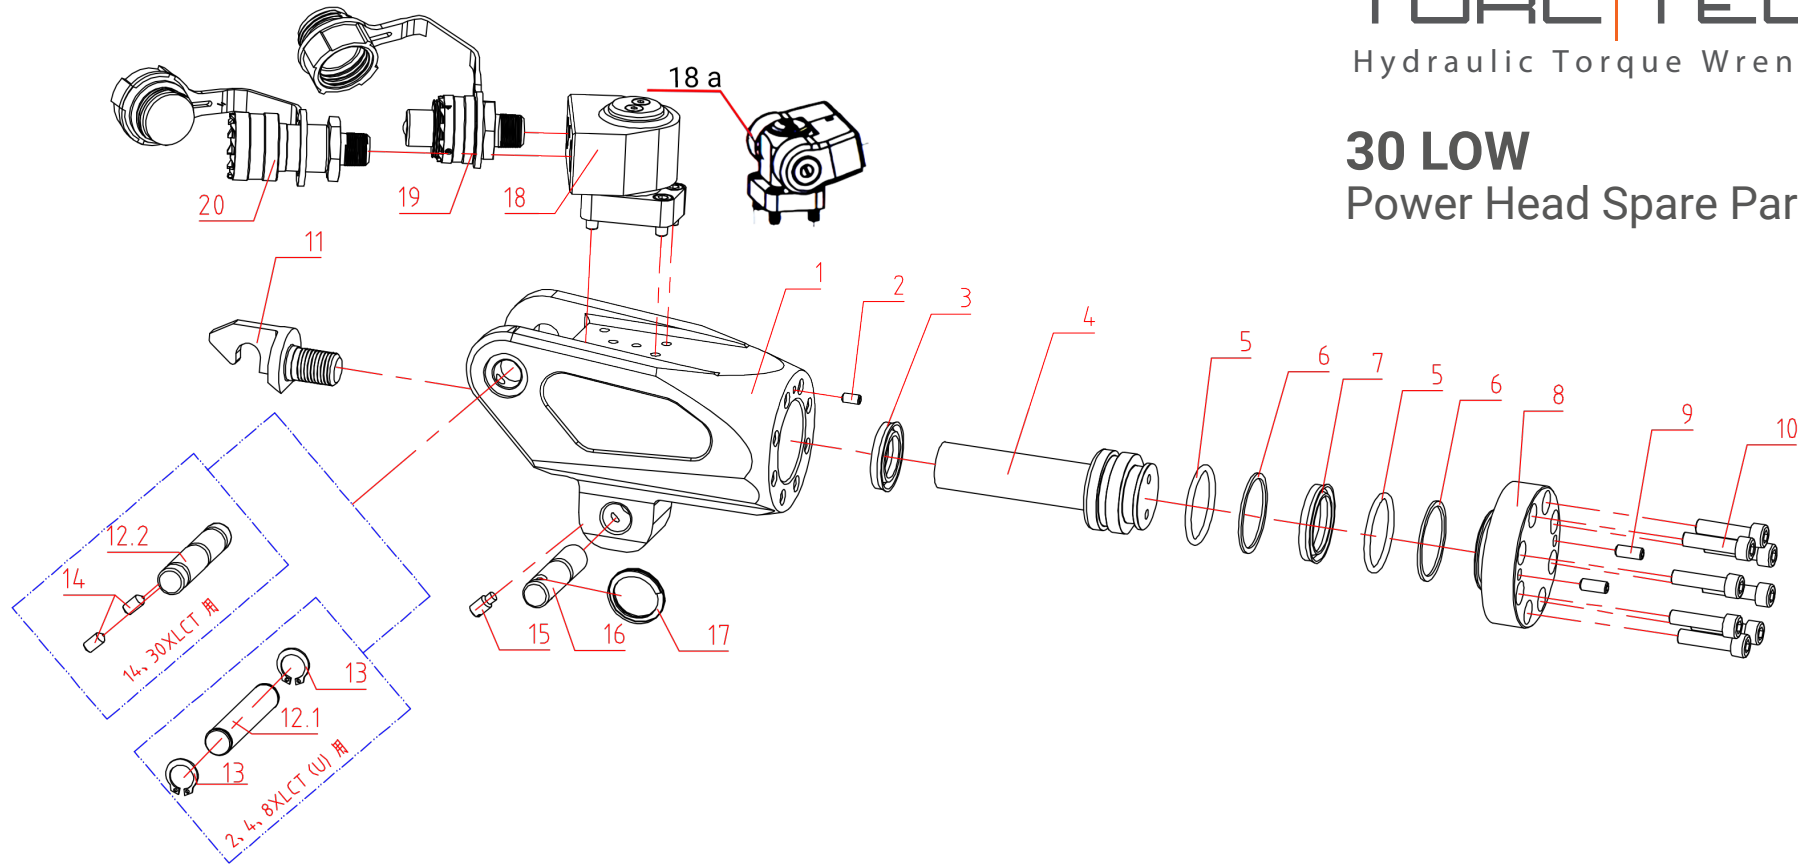


Part No	Description	Quantity
SP30LP00	SEAL KIT [3,5,6,7]	1
SP30LP01	BODY ASSEMBLY	1
SP30LP02	SCREW	1
SP30LP04	PISTON ROD ASSEMBLY	1
SP30LP08	END CAP	1
SP30LP09	SCREW	2
SP30LP10	SCREW	8
SP30LP11	ROD END	1
SP30LP12.2	FIXED UPPER PIN	1
SP30LP14	RETAINING RING	2
SP30LP15	SCREW WITH SPRING	1

Part No	Description	Quantity
SP30LP16	SHORT LINK PIN	1
SP30LP17	RING	1
SP30LP18	SWIVEL ASSEMBLY 360°	1
SP30LP18a	SWIVEL ASSEMBLY 180°/360°	1
SP30LP19	1/4" NPT SCREW TYPE OUTER THREAD NIPPLE	1
SP30LP20	1/4" NPT SCREW TYPE OUTER THREAD BODY	1



30 LOW

Cassette Spare Parts List

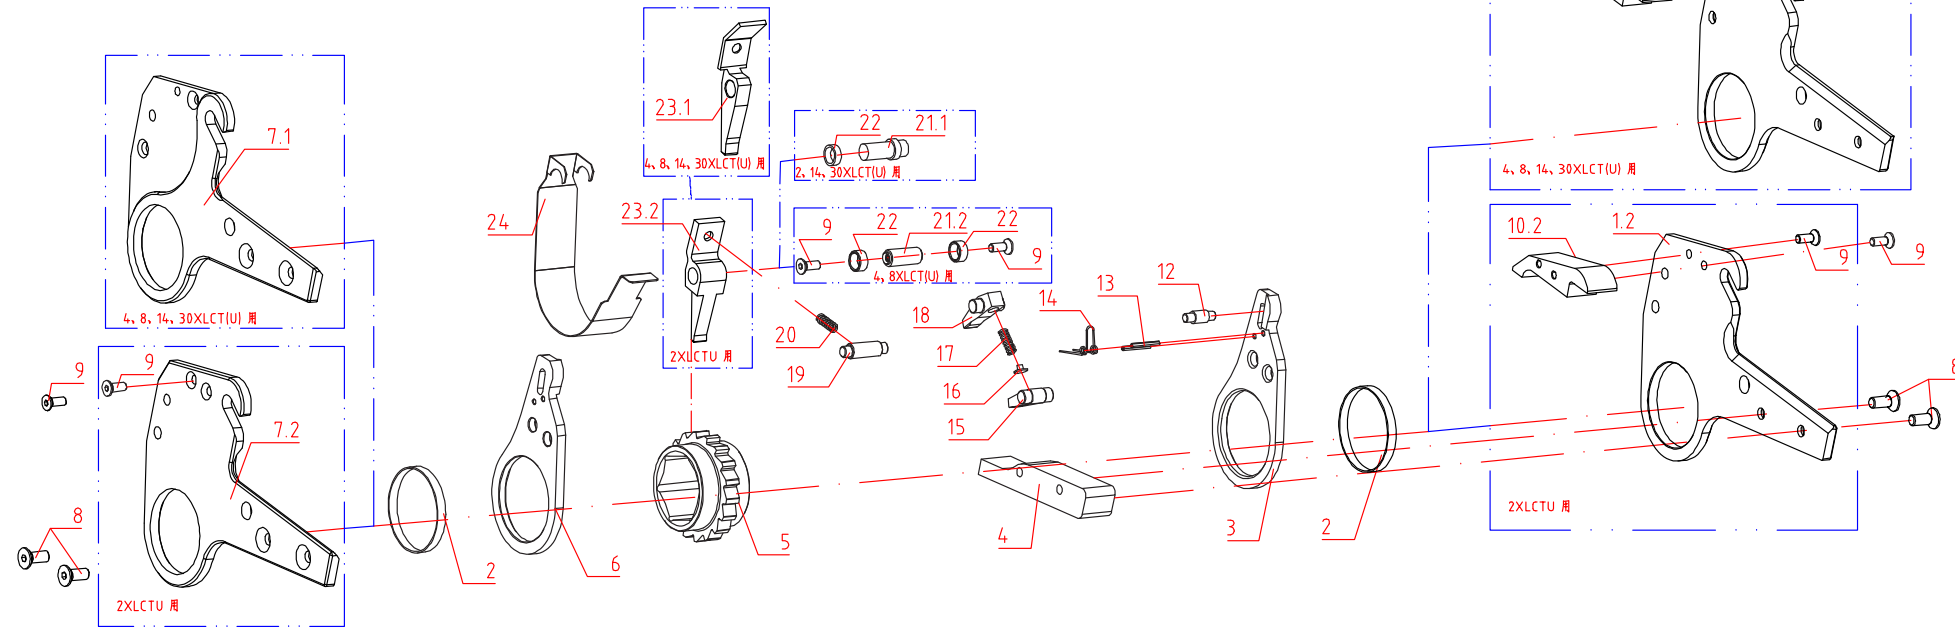

Part No	Description	Quantity
SP30LC01.1	RIGHT SIDE PLATE [85-90-95-100-105-110-115]	1
SP30LC02	BRASS BUSHING	2
SP30LC03	LEFT DRIVE PLATE [85-90-95-100-105-110-115]	1
SP30LC04	REACTION BLOCK EXTENSION	1
SP30LC05	HEX RATCHET [85-90-95-100-105-110-115]	1
SP30LC06	RIGHT DRIVE PLATE [85-90-95-100-105-110-115]	1
SP30LC07.1	LEFT SIDE PLATE [85-90-95-100-105-110-115]	1
SP30LC08	SCREW M16x40	4

Part No	Description	Quantity
SP30LC09	SCREW M8x20	2
SP30LC10.1	TOP SPACER	1
SP30LC11	ROLL PIN	1
SP30LC12	DRIVE PIN	1
SP30LC13	DRIVE PIN	2
SP30LC14	DRIVE PIN SPRING	1
SP30LC15	SECONDARY DRIVE PAWL	1
SP30LC16	SPRING RING	1
SP30LC17	TENSION SPRING	1
SP30LC18	PRIMARY DRIVE PAWL	1
SP30LC19	SPRING SPACER	1
SP30LC20	TENSION SPRING	1

Part No	Description	Quantity
SP30LC21.1	ROLL PIN	1
SP30LC22	SPACER	2
SP30LC23.1	REACTION PAWL [85-90-95-100-105-110-115]	1
SP30LC24	SHROUD [85-90-95-100-105-110-115]	1
SP30LCERA	LONG REACTION ARM	1
SP30LCPAD	SHORT REACTION ARM	1