


8 LOW Power Head Spare Parts List

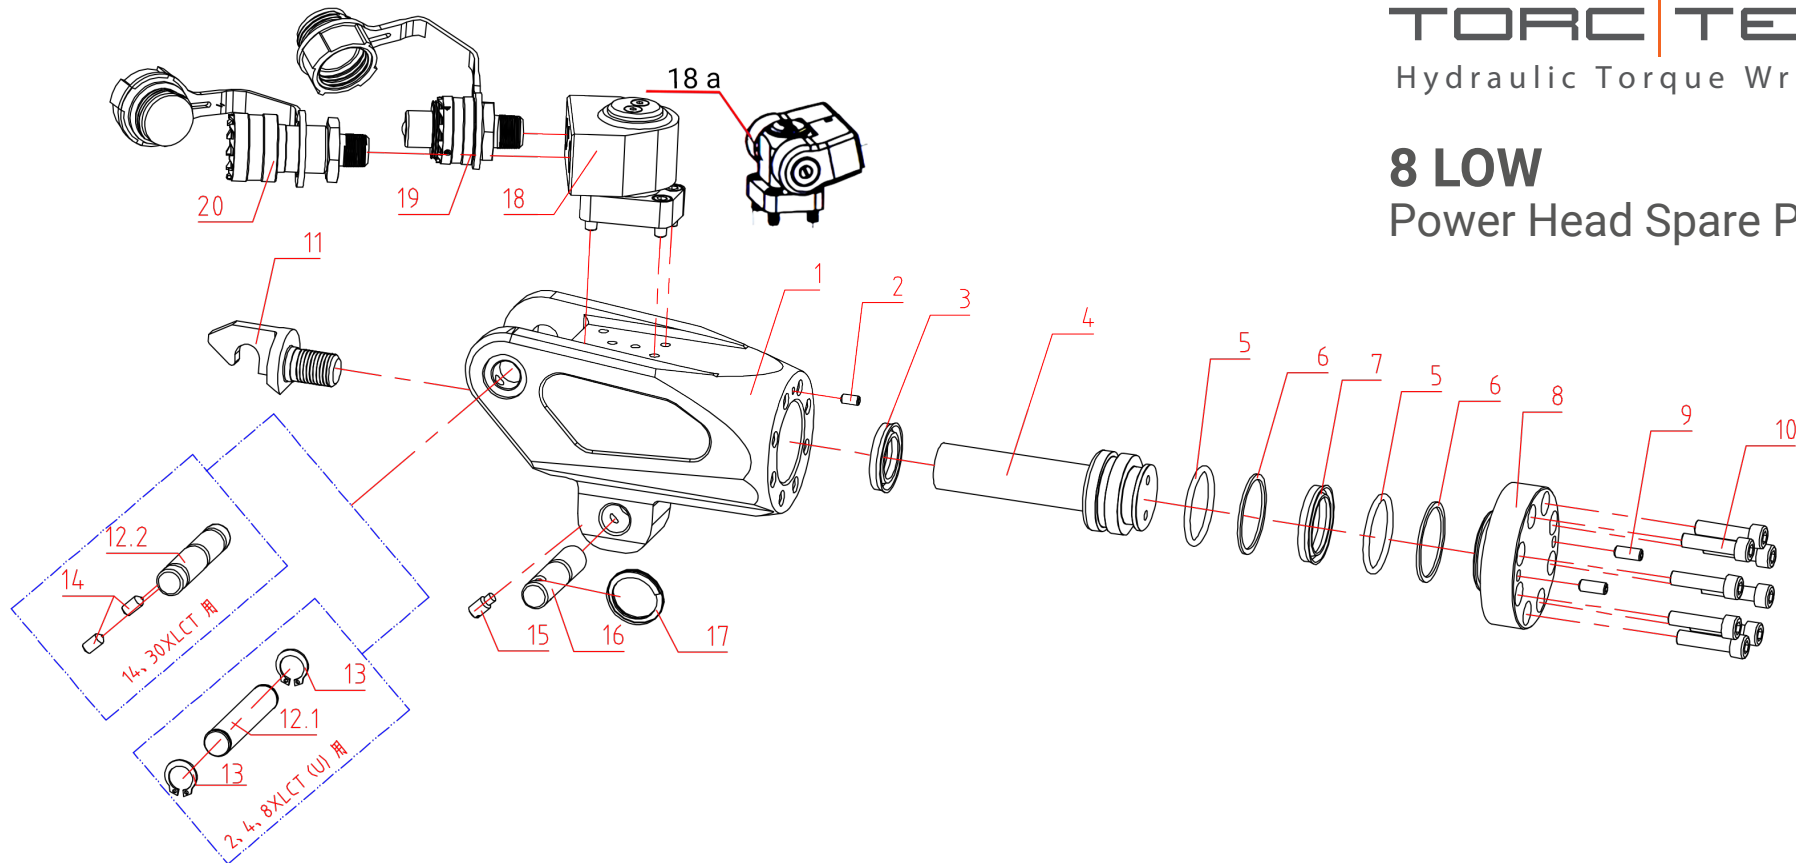


Part No	Description	Quantity
SP08LP00	SEAL KIT [3,5,6,7]	1
SP08LP01	BODY ASSEMBLY	1
SP08LP02	SCREW	1
SP08LP04	PISTON ROD ASSEMBLY	1
SP08LP08	END CAP	1
SP08LP09	SCREW	2
SP08LP10	SCREW	8
SP08LP11	ROD END	1
SP08LP12.1	FIXED UPPER PIN	1
SP08LP13	RETAINING RING	2
SP08LP15	SCREW WITH SPRING	1

Part No	Description	Quantity
SP08LP16	SHORT LINK PIN	1
SP08LP17	RING	1
SP08LP18	SWIVEL ASSEMBLY 360°	1
SP08LP18a	SWIVEL ASSEMBLY 180°/360°	1
SP08LP19	1/4" NPT SCREW TYPE OUTER THREAD NIPPLE	1
SP08LP20	1/4" NPT SCREW TYPE OUTER THREAD BODY	1



8 LOW

Cassette Spare Parts List

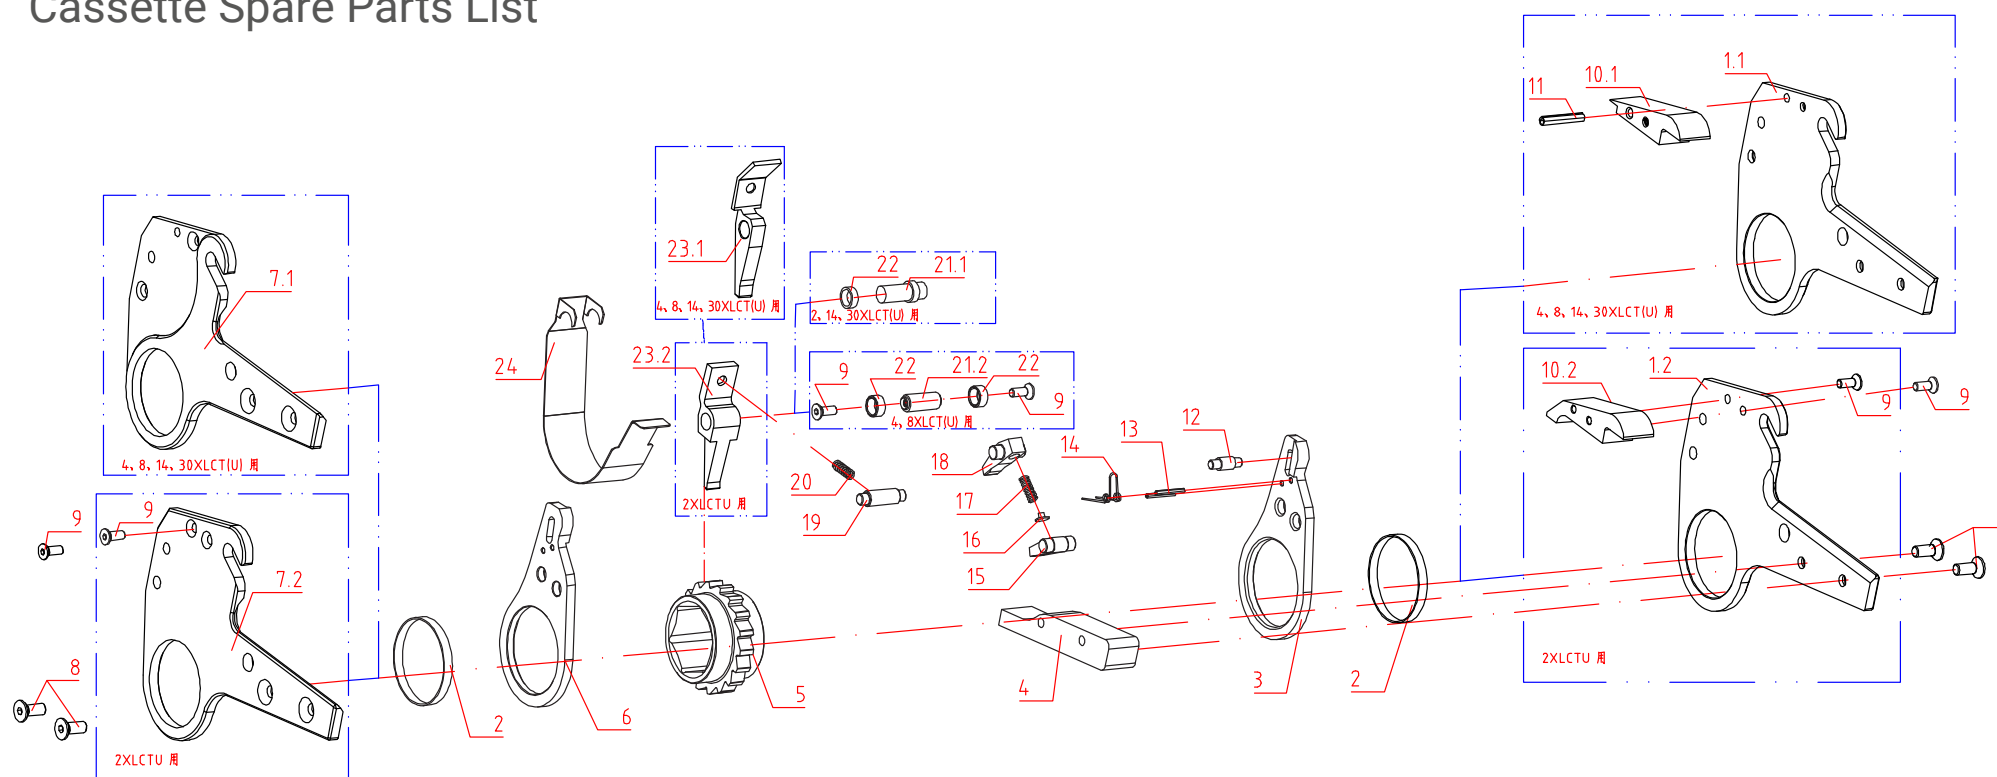

Part No	Description	Quantity
SP08LC01.1	RIGHT SIDE PLATE [75-80-85-90-95-100]	1
SP08LC02	BRASS BUSHING	2
SP08LC03	LEFT DRIVE PLATE [75-80-85-90-95-100]	1
SP08LC04	REACTION BLOCK EXTENSION	1
SP08LC05	HEX RATCHET [70-75-80-85-90-95-100]	1
SP08LC06	RIGHT DRIVE PLATE [75-80-85-90-95-100]	1
SP08LC07.1	LEFT SIDE PLATE [75-80-85-90-95-100]	1
SP08LC08	SCREW M16x40	4

Part No	Description	Quantity
SP08LC09	SCREW M8x20	4
SP08LC10.1	TOP SPACER	1
SP08LC11	ROLL PIN	1
SP08LC12	DRIVE PIN	1
SP08LC13	ROLL PIN	2
SP08LC14	DRIVE PIN SPRING	1
SP08LC15	SECONDARY DRIVE PAWL	1
SP08LC16	SPRING RING	1
SP08LC17	TENSION SPRING	1
SP08LC18	PRIMARY DRIVE PAWL	1
SP08LC19	SPRING SPACER	1
SP08LC20	TENSION SPRING	1

Part No	Description	Quantity
SP08LC21.2	ROLL PIN	1
SP08LC22	SPACER	2
SP08LC23.1	REACTION PAWL [75-80-85-90-95-100]	1
SP08LC24	SHROUD [75-80-85-90-95-100]	1
SP08LCERA	LONG REACTION ARM	1
SP08LCPAD	SHORT REACTION ARM	1