


TW-H120

Power Head Spare Parts List

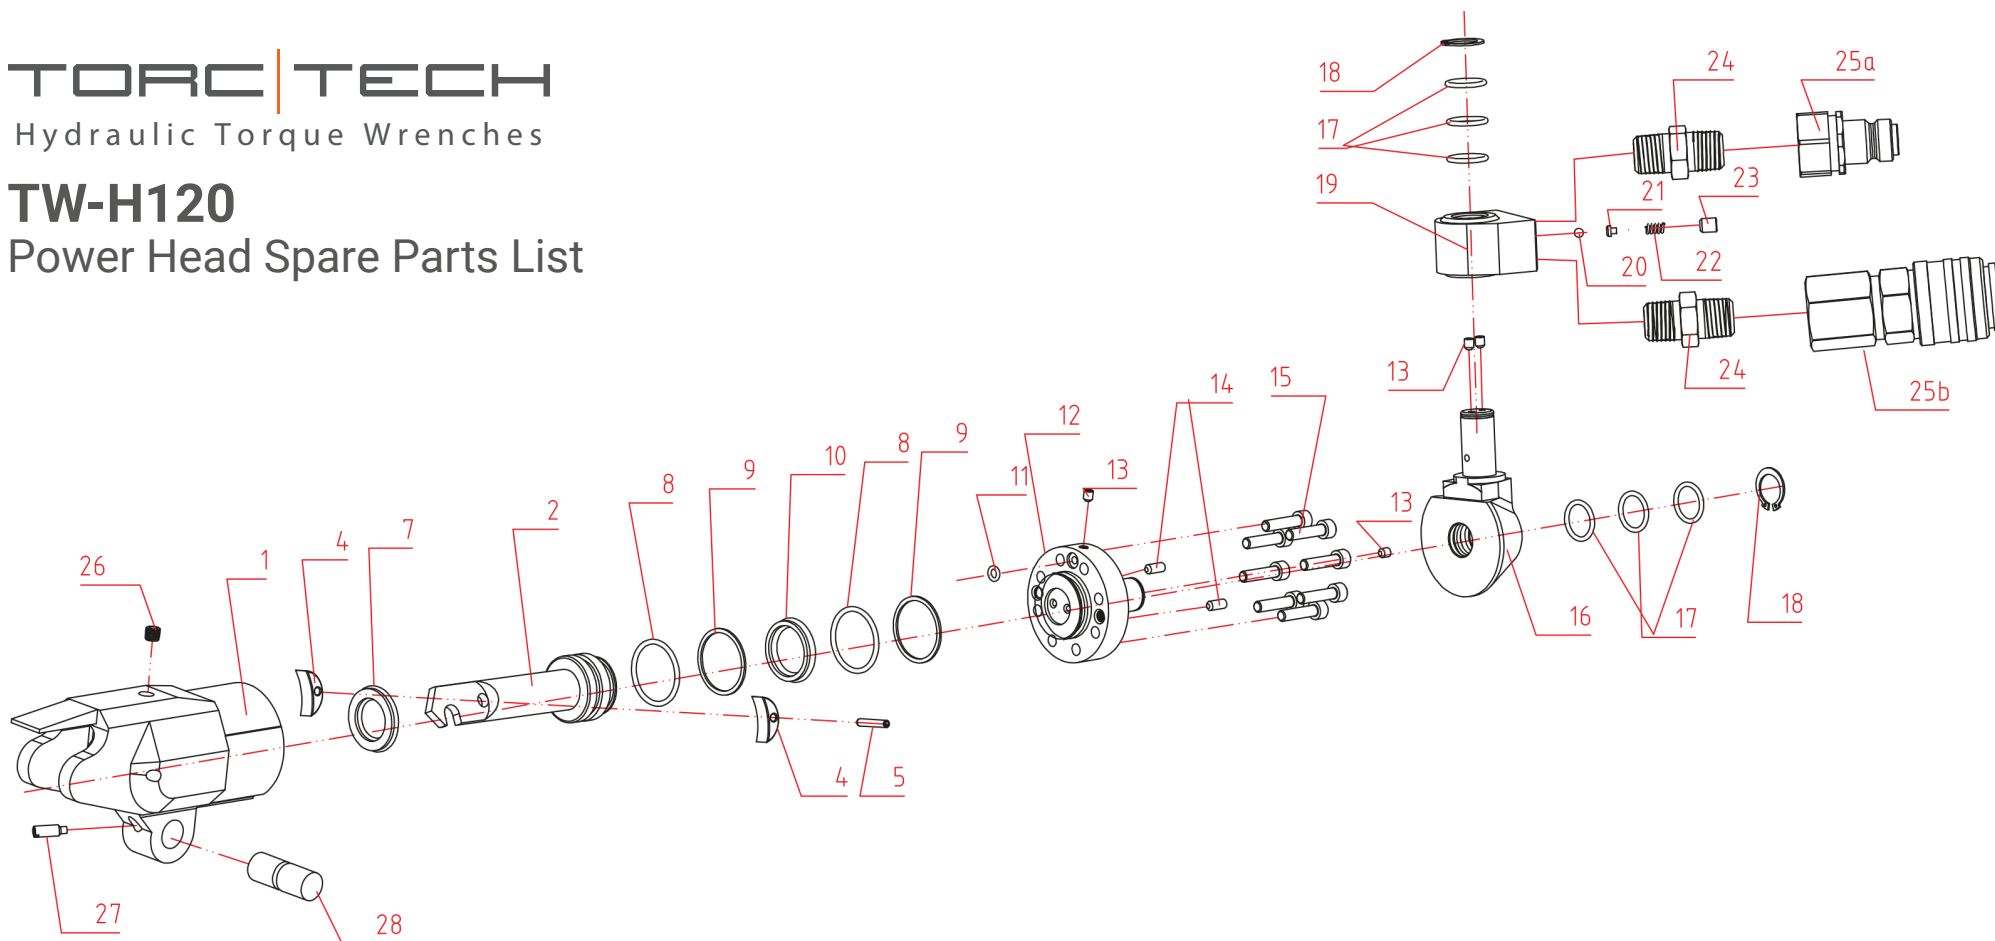


Part No	Description	Quantity
SPH120P-00	REPAIR KIT [7-8-9-10]	1
SPH120P-01	BODY ASSEMBLY	1
SPH120P-02	PISTON ROD ASSEMBLY	1
SPH120P-04	PISTON MOVABLE WEDGE	2
SPH120P-05	PIN	1
SPH120P-11	SCREW	2
SPH120P-12	END CAP	1
SPH120P-13	SCREW	4
SPH120P-14	SCREW	2
SPH120P-15	SCREW	8
SPH120P-16	OIL INLET SHAFT	1
SPH120P-17	O-RING	6

Part No	Description	Quantity
SPH120P-18	RETAINING RING	2
SPH120P-19	SWIVEL ASSEMBLY 360°	1
SPH120P-20	BALL	1
SPH120P-21	BALL SEAT	1
SPH120P-22	SPRING	1
SPH120P-23	RETAINING RING	1
SPH120P-24	NIPPLE 1/4" NPT	2
SPH120P-25a	1/4" NPT FEMALE COUPLING END	1
SPH120P-25b	1/4" NPT FEMALE COUPLING BODY	1
SPH120P-26	SCREW	1
SPH120P-27	SPRING RETAINING RING	1
SPH120P-28	PISTON CASSETTE CONNECTION PIN	1



TW-H120

Cassette Spare Parts List

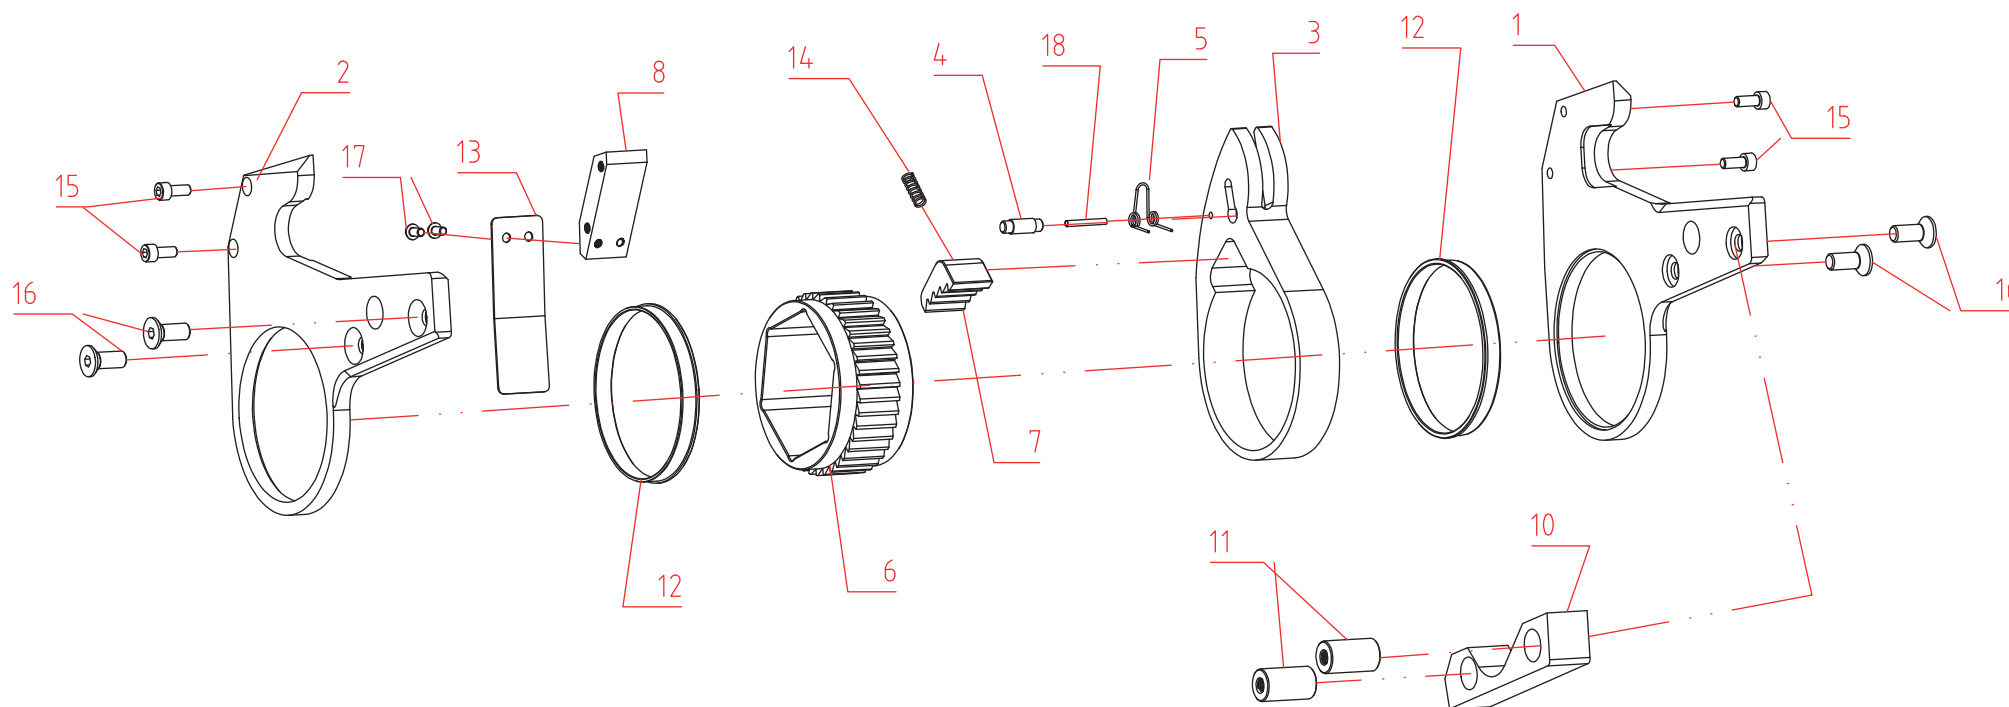

Part No	Description	Quantity
SPH120C-01	RIGHT BODY PLATE [48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80-81-83-84-85-87-89-90-91-92-94-95-97-99-100-105]	1
SPH120C-02	LEFT BODY PLATE [48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80-81-83-84-85-87-89-90-91-92-94-95-97-99-100-105]	1
SPH120C-03	GEAR DRIVE BODY [48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80-81-83-84-85-87-89-90-91-92-94-95-97-99-100-105]	1
SPH120C-04	HOOK DRIVER	1
SPH120C-05	HOOK DRIVER SPRING	1
SPH120C-06	HEXAGONAL GEAR [48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80-81-83-84-85-87-89-90-91-92-94-95-97-99-100-105]	1

Part No	Description	Quantity
SPH120C-07	DRIVE PAWL	1
SPH120C-08	TOP SPACER	1
SPH120C-10	REACTION BLOCK EXTENSION	1
SPH120C-11	BODY CONNECTION BEARING	2
SPH120C-12	BRONZE BODY BUSHING	2
SPH120C-13	SHROUD [48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80-81-83-84-85-87-89-90-91-92-94-95-97-99-100-105]	1
SPH120C-14	DRIVE PAWL	1
SPH120C-15	SCREW M10	4
SPH120C-16	SCREW M12	4
SPH120C-17	SHROUD BOLT M4	2
SPH120C-18	PIN	1