


TW-H27

Power Head Spare Parts List

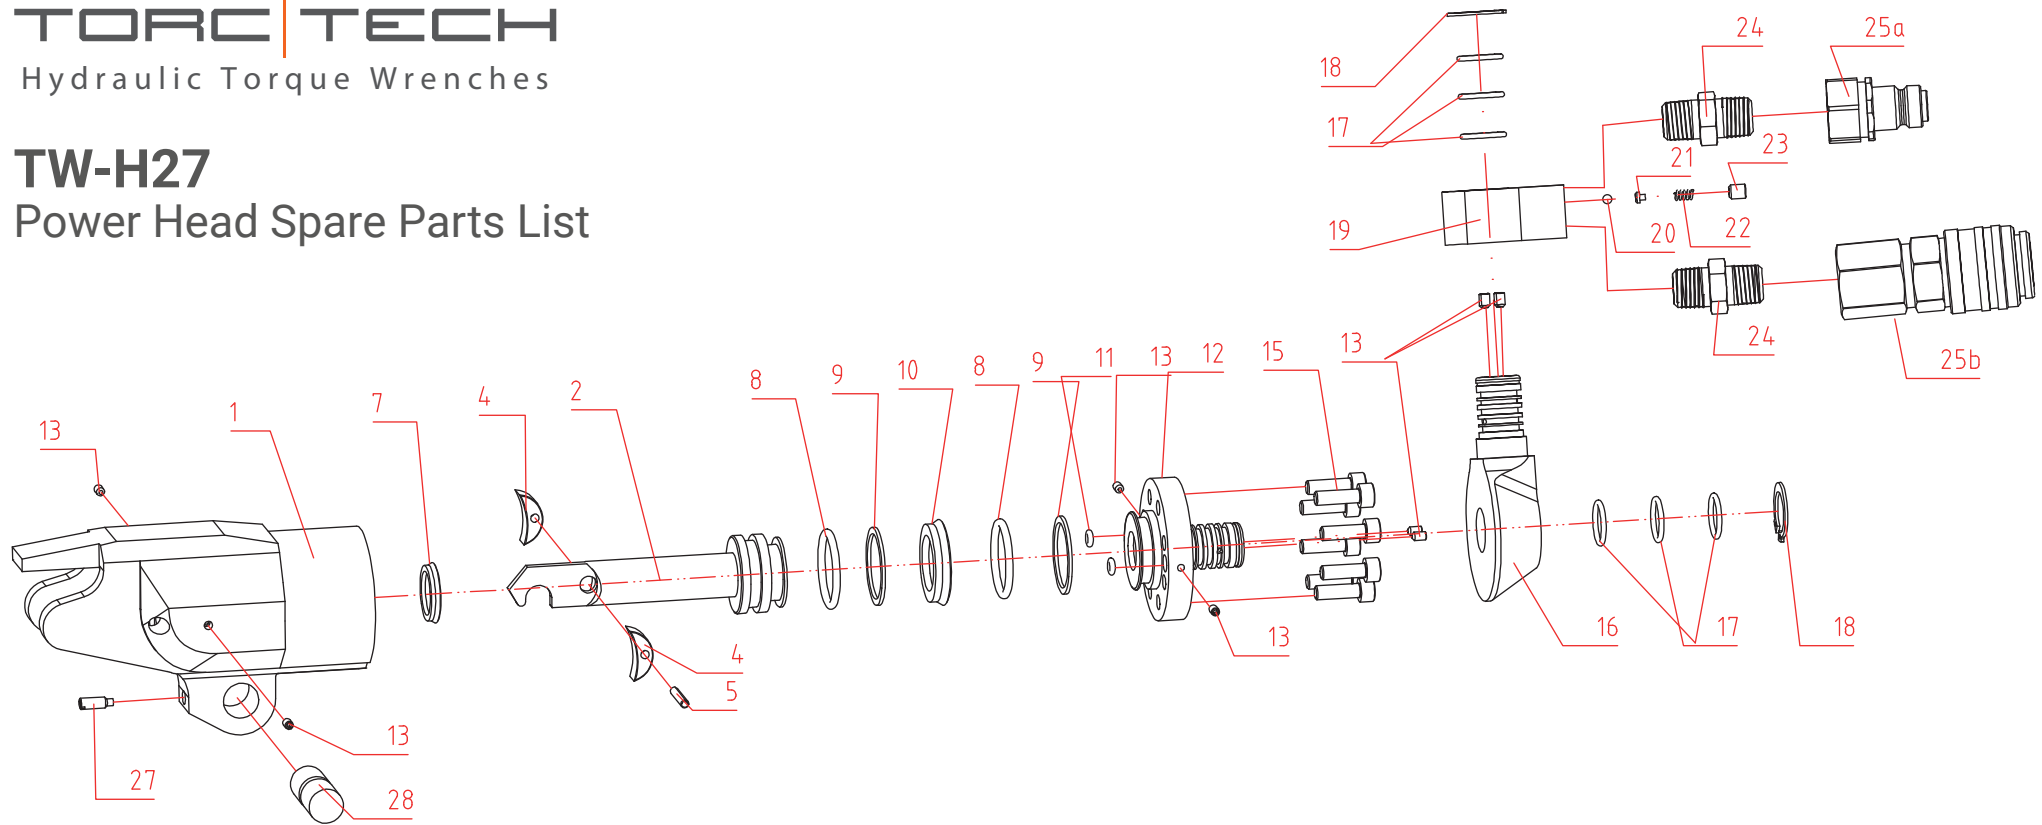

Part No	Description	Quantity
SPH27P-00	REPAIR KIT [7-8-9-10]	1
SPH27P-01	BODY ASSEMBLY	1
SPH27P-02	PISTON ROD ASSEMBLY	1
SPH27P-04	PISTON MOVABLE WEDGE	2
SPH27P-05	PIN	1
SPH27P-11	SCREW	2
SPH27P-12	END CAP	1
SPH27P-13	SCREW	6
SPH27P-15	SCREW	8
SPH27P-16	OIL INLET SHAFT	1
SPH27P-17	O-RING	6


Part No	Description	Quantity
SPH27P-18	RETAINING RING	2
SPH27P-19	SWIVEL ASSEMBLY 180°x 360°	1
SPH27P-20	BALL	1
SPH27P-21	BALL SEAT	1
SPH27P-22	SPRING	1
SPH27P-23	RETAINING RING	1
SPH27P-24	NIPPLE -1/4" NPT	2
SPH27P-25a	1/4" NPT FEMALE COUPLING END	1
SPH27P-25b	1/4" NPT FEMALE COUPLING BODY	1
SPH27P-27	SPRING RETAINING RING	1
SPH27P-28	PISTON CASSETTE CONNECTION PIN	1



TW-H27

Cassette Spare Parts List

TORC | TECH
Hydraulic Torque Wrenches

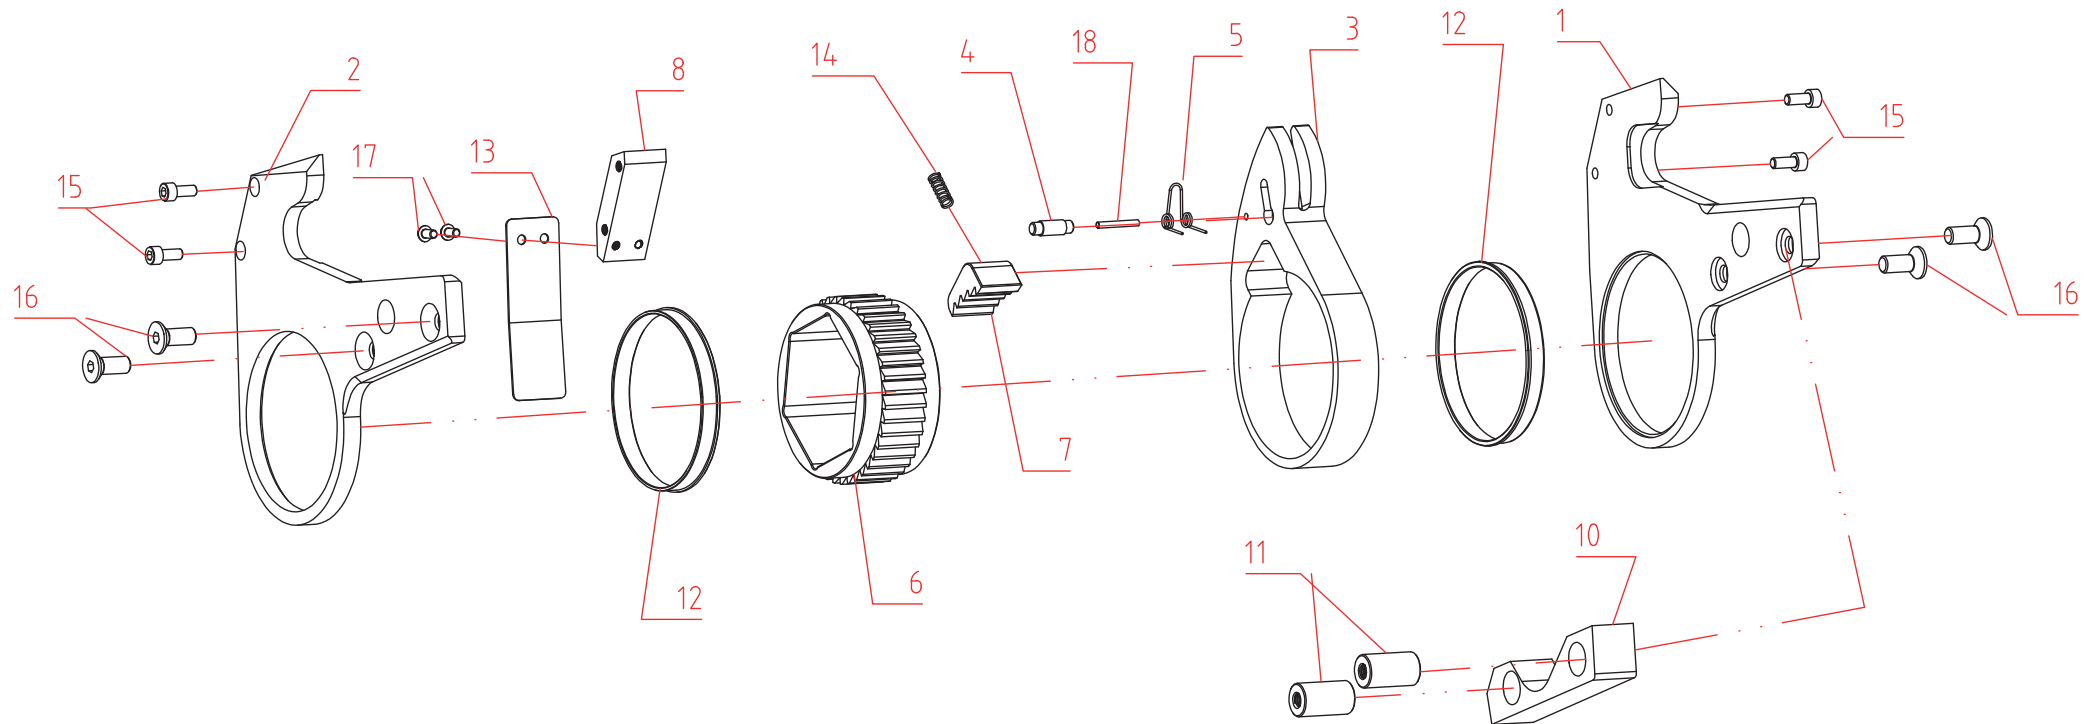

Part No	Description	Quantity
SPH27C-01	RIGHT BODY PLATE [19-22-26-27-29-30-32-33-35-36-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-73]	1
SPH27C-02	LEFT BODY PLATE [19-22-26-27-29-30-32-33-35-36-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-73]	1
SPH27C-03	GEAR DRIVE BODY [19-22-26-27-29-30-32-33-35-36-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-73]	1
SPH27C-04	HOOK DRIVER	1
SPH27C-05	HOOK DRIVER SPRING	1
SPH27C-06	HEXAGONAL GEAR [19-22-26-27-29-30-32-33-35-36-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-73]	1
SPH27C-07	DRIVE PAWL	1
SPH27C-08	TOP SPACER	1

Part No	Description	Quantity
SPH27C-10	REACTION BLOCK EXTENSION	1
SPH27C-11	BODY CONNECTION BEARING	2
SPH27C-12	BRONZE BODY BUSHING	2
SPH27C-13	SHROUD [19-22-26-27-29-30-32-33-35-36-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-73]	1
SPH27C-14	DRIVE PAWL	1
SPH27C-15	SCREW M10	4
SPH27C-16	SCREW M12	4
SPH27C-17	SHROUD BOLT M4	2
SPH27C-18	PIN	1