


TW-H54

Power Head Spare Parts List

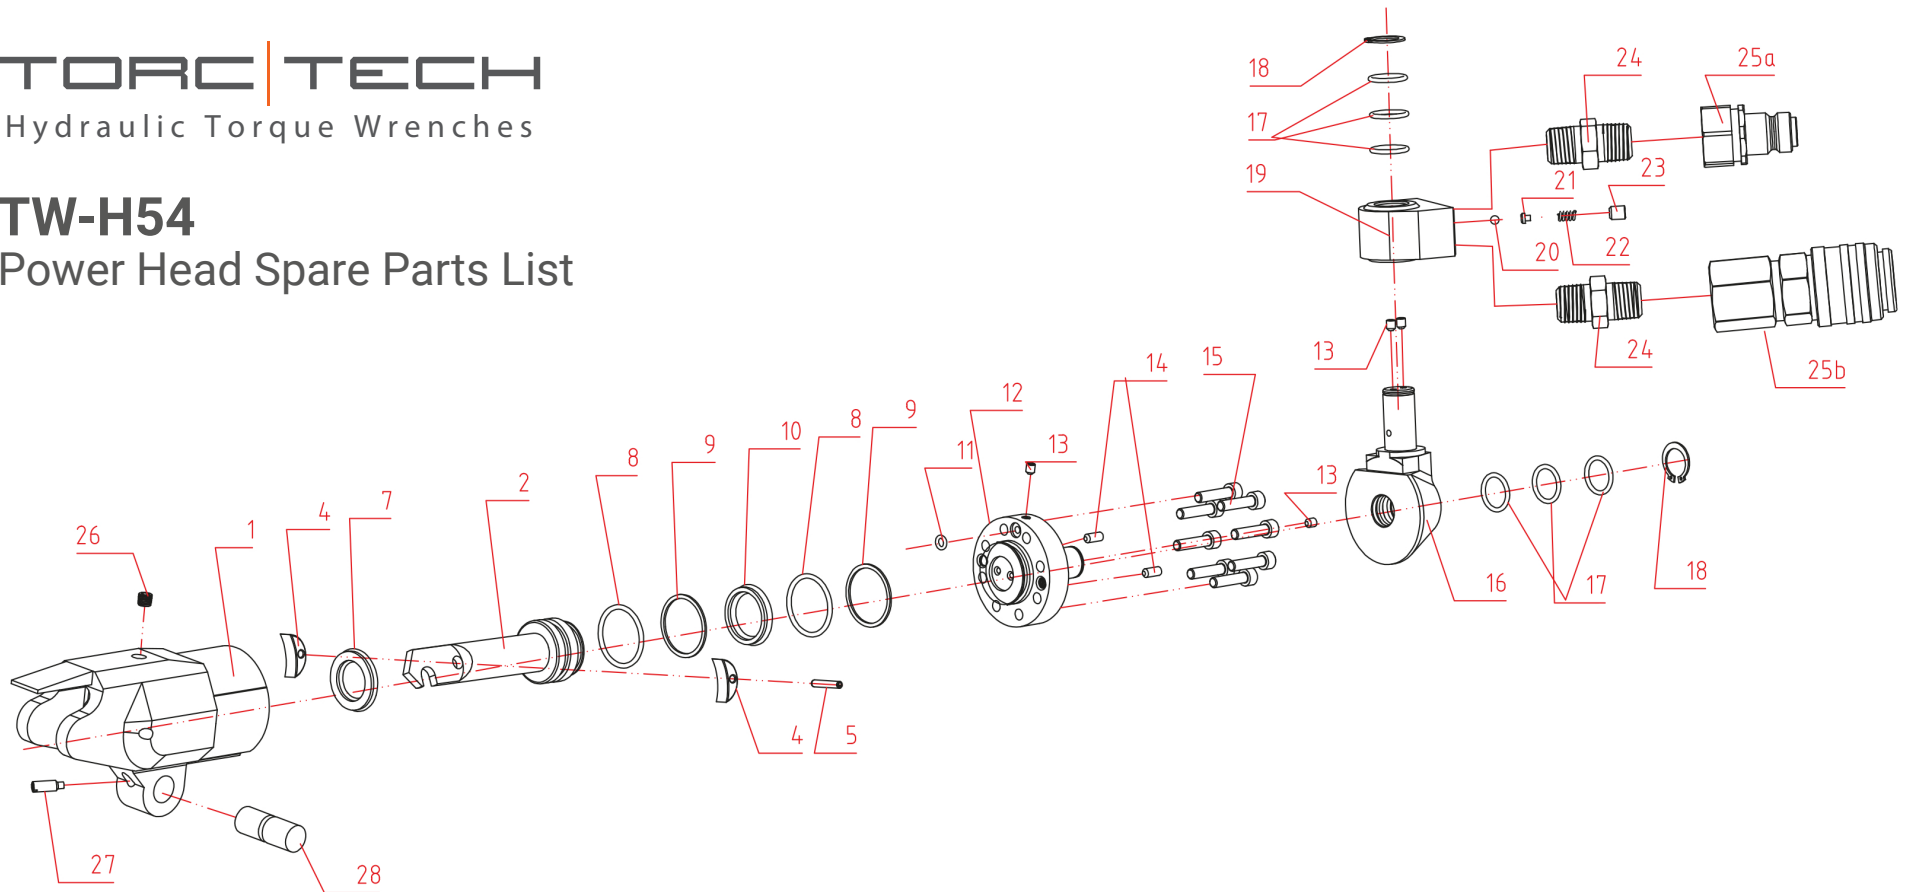


Part No	Description	Quantity
SPH54P-00	REPAIR KIT [7-8-9-10]	1
SPH54P-01	BODY ASSEMBLY	1
SPH54P-02	PISTON ROD ASSEMBLY	1
SPH54P-04	PISTON MOVABLE WEDGE	2
SPH54P-05	PIN	1
SPH54P-11	SCREW	2
SPH54P-12	END CAP	1
SPH54P-13	SCREW	4
SPH54P-14	SCREW	2
SPH54P-15	SCREW	8
SPH54P-16	OIL INLET SHAFT	1
SPH54P-17	O-RING	6

Part No	Description	Quantity
SPH54P-18	RETAINING RING	2
SPH54P-19	SWIVEL ASSEMBLY 180°x 360°	1
SPH54P-20	BALL	1
SPH54P-21	BALL SEAT	1
SPH54P-22	SPRING	1
SPH54P-23	RETAINING RING	1
SPH54P-24	NIPPLE -1/4" NPT	2
SPH54P-25a	1/4" NPT FEMALE COUPLING END	1
SPH54P-25b	1/4" NPT FEMALE COUPLING BODY	1
SPH54P-26	SCREW	1
SPH54P-27	SPRING RETAINING RING	1
SPH54P-28	PISTON CASSETTE CONNECTION PIN	1



TW-H54

Cassette Spare Parts List

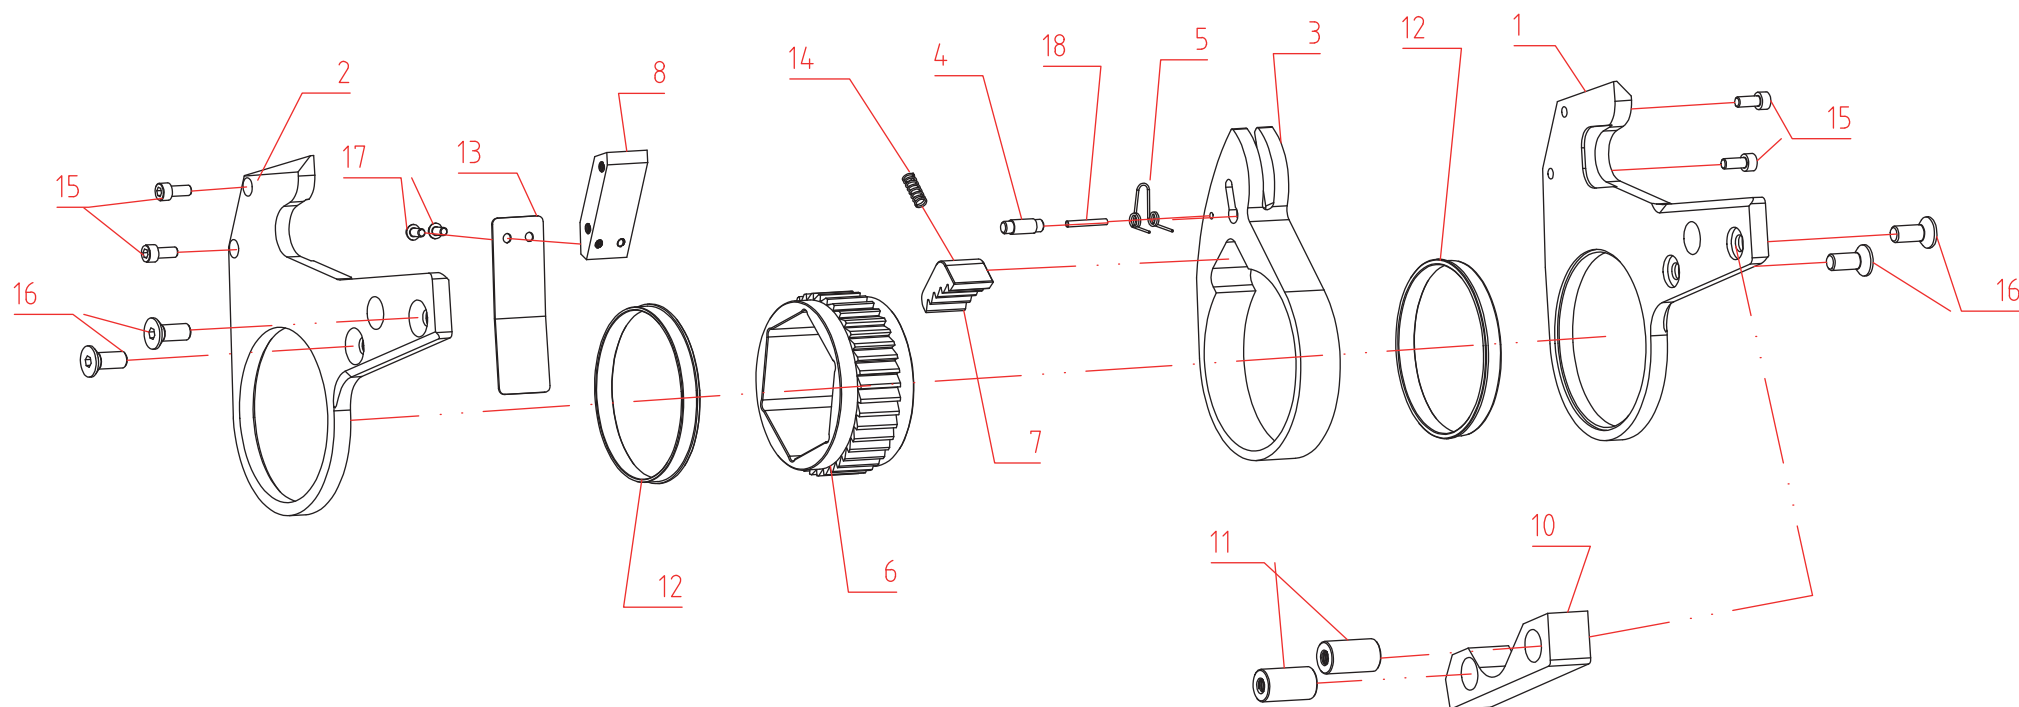

Part No	Description	Quantity
SPH54C-01	RIGHT BODY PLATE [27-30-32-33-35-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80]	1
SPH54C-02	LEFT BODY PLATE [27-30-32-33-35-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80]	1
SPH54C-03	GEAR DRIVE BODY [27-30-32-33-35-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80]	1
SPH54C-04	HOOK DRIVER	1
SPH54C-05	HOOK DRIVER SPRING	1
SPH54C-06	HEXAGONAL GEAR [27-30-32-33-35-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80]	1

Part No	Description	Quantity
SPH54C-07	DRIVE PAWL	1
SPH54C-08	TOP SPACER	1
SPH54C-10	REACTION BLOCK EXTENSION	1
SPH54C-11	BODY CONNECTION BEARING	2
SPH54C-12	BRONZE BODY BUSHING	2
SPH54C-13	SHROUD [27-30-32-33-35-38-40-41-43-44-46-48-49-50-52-54-55-57-59-60-62-63-65-67-68-70-71-73-75-77-78-80]	1
SPH54C-14	DRIVE PAWL	1
SPH54C-15	SCREW M10	4
SPH54C-16	SCREW M12	4
SPH54C-17	SHROUD BOLT M4	2
SPH54C-18	PIN	1