


# 10 IBT

## Pressure -Torque Conversion Chart

## TORC | TECH Hydraulic Torque Wrenches

Pressure	Torque Value
Bar	Nm
70	1551
80	1773
90	1994
100	2216
110	2438
120	2659
130	2881
140	3103
150	3324
160	3546
170	3768
180	3989
190	4211
200	4433
210	4654
220	4876
230	5098
240	5319
250	5541
260	5763
270	5984
280	6206
290	6428
300	6649
310	6871
320	7093
330	7314
340	7536
350	7758
360	7979
370	8201
380	8423

Pressure	Torque Value
Bar	Nm
390	8644
400	8866
410	9088
420	9309
430	9531
440	9753
450	9974
460	10196
470	10418
480	10639
490	10861
500	11083
510	11304
520	11526
530	11748
540	11969
550	12191
560	12413
570	12634
580	12856
590	13078
600	13299
610	13521
620	13743
630	13964
640	14186
650	14408
660	14629
670	14851
680	15073
690	15294
700	15516

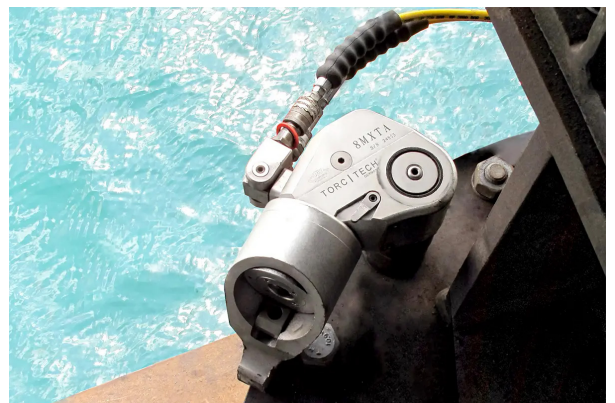

The data in the pressure torque table are the IBT series factory calibration values. They can be used as a calibration certificate.