

20 IBT


Pressure -Torque Conversion Chart

TORC|TECH

Hydraulic Torque Wrenches

Pressure	Torque Value
Bar	Nm
70	2666
80	3047
90	3428
100	3809
110	4190
120	4571
130	4952
140	5332
150	5713
160	6094
170	6475
180	6856
190	7237
200	7618
210	7999
220	8380
230	8761
240	9142
250	9523
260	9903
270	10284
280	10665
290	11046
300	11427
310	11808
320	12189
330	12570
340	12951
350	13332
360	13713
370	14094
380	14475

Pressure	Torque Value
Bar	Nm
390	14855
400	15236
410	15617
420	15998
430	16379
440	16760
450	17141
460	17522
470	17903
480	18284
490	18665
500	19046
510	19427
520	19807
530	20188
540	20569
550	20950
560	21331
570	21712
580	22093
590	22474
600	22855
610	23236
620	23617
630	23998
640	24378
650	24759
660	25140
670	25521
680	25902
690	26283
700	26664

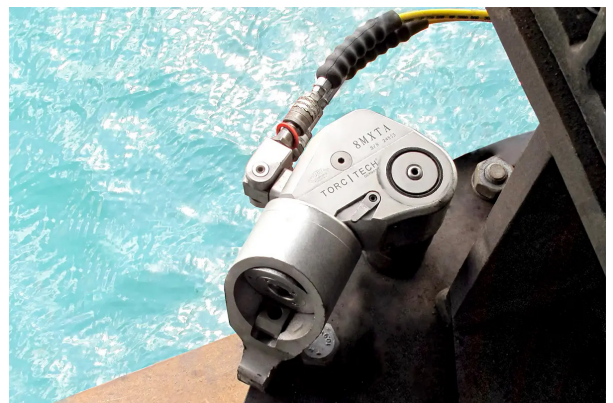

The data in the pressure torque table are the IBT series factory calibration values. They can be used as a calibration certificate.